



# Sony ECM-MS907 Volume issue troubleshooting

Written By: Justin Lewis



## INTRODUCTION

This guide will examine some of the common problems related to volume issues involved with microphone recordings.

## Step 1 — Sony ECM-MS907 Volume issue troubleshooting



- Often when using the recording range of 90 degrees, a low recording occurs. This particular setting seems tailored towards a much louder object, such as a musical instrument, etc.
- To change this setting, change switch to the 120 degree recording range.

## Step 2



- Another problem involves the stereo jack of the microphone being inserted into the wrong output of the external device.




## Step 3



- In this particular external device, the Sony MiniDisc player, the microphone stereo jack can mistakenly be inserted into the laptop, or "white" input.
- Always remember to insert stereo jack into the microplug, or "red" input.


## Step 4

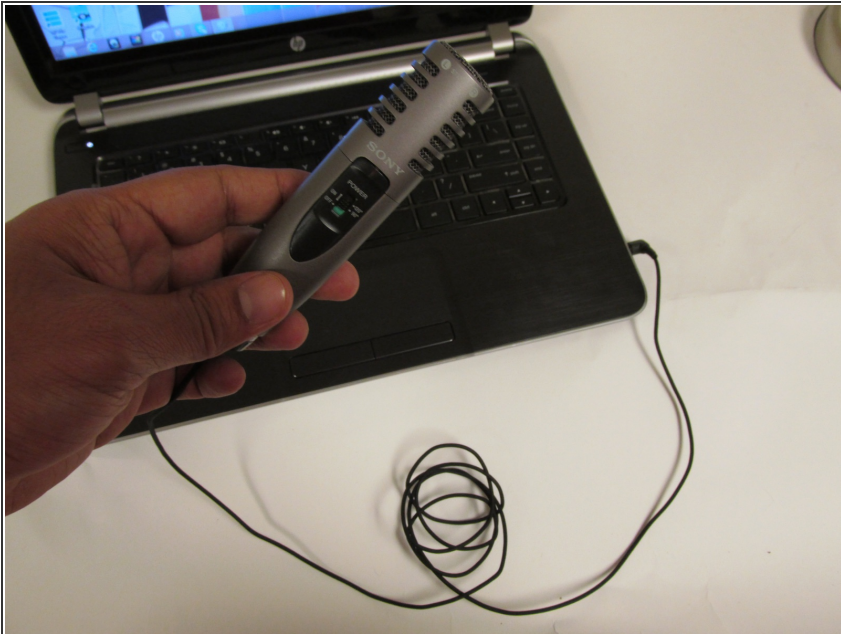

- Some volume issues could be related to other external devices, such as a laptop. This particular microphone was not designed to be used with a computer.

## Step 5



- One solution is to use a device such as a USB soundcard, which can be purchased online or at most electronics stores.
  - Simply insert soundcard into a USB input in the laptop
  - Insert stereo jack of microphone into the soundcard input marked with the "microphone" symbol.
-  This may resolve laptop related problems related to low volume during recordings.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-08 01:48:02 AM.